



CycleShelter Assembly:

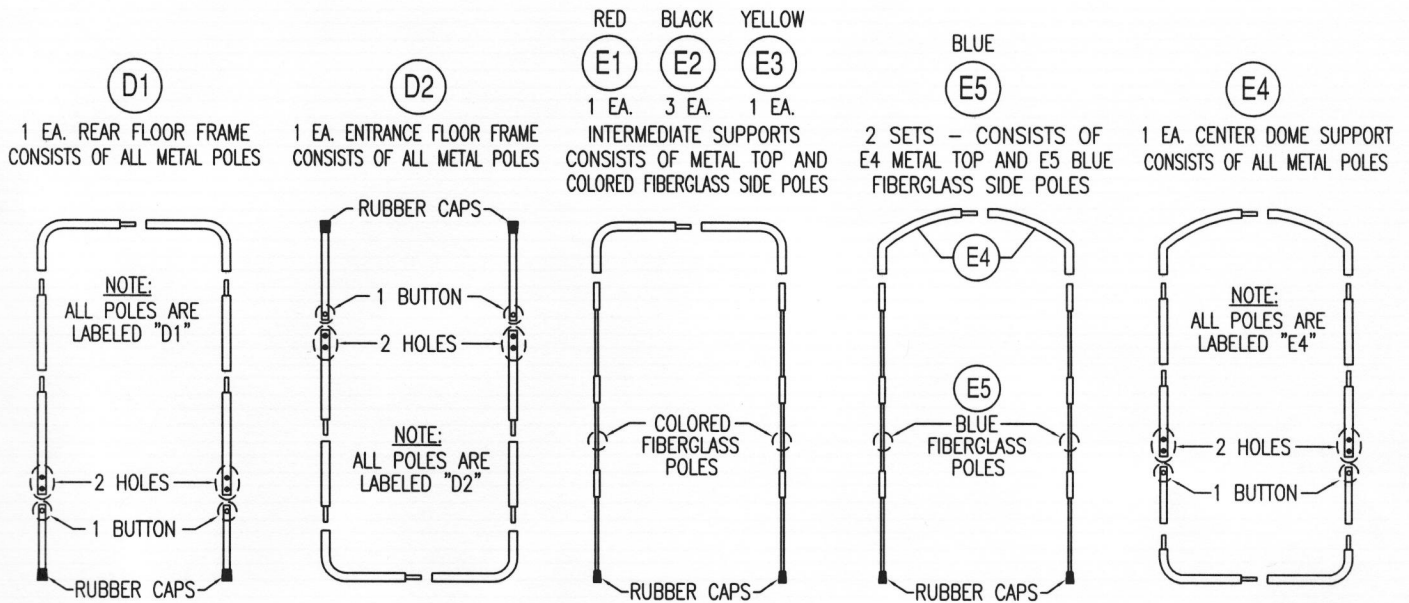

ASSEMBLY INSTRUCTIONS:

1. LAYOUT FABRIC COVER. 2. ASSEMBLE FRAMEWORK AS SHOWN ABOVE AND INSTALL INTO FABRIC IN THE FOLLOWING SEQUENCE: D1, D2, E1 RED, E2 BLACK, E5 BLUE, E4, E5 BLUE, E2 BLACK, E2 BLACK & E3 YELLOW.

NOTE: INSERT RUBBER CAPPED POLE ENDS INTO CENTER POCKETS AND ALIGN POLES WITH THE CORRECT DOME SEAMS. D1 & D2 FLOOR FRAMES AND E4 CENTER DOME SUPPORT HAVE TWO SETTINGS TO INCREASE OR REDUCE TENSION.

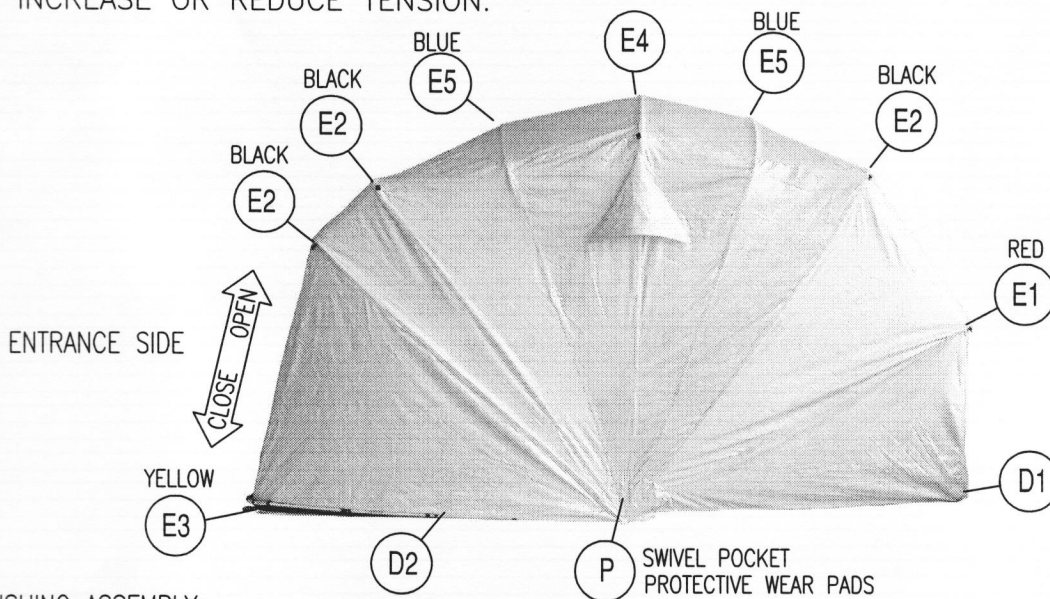

FINISHING ASSEMBLY:

LIFT THE LAST DOME FRAME E3 YELLOW AND MOVE IT OVER TO THE BOTTOM OF THE CYCLESHELTER ENTRANCE, USING THE FOUR QUICK CLIPS TO KEEP THE DOME CLOSED. MAKE SURE SWIVEL POCKET PROTECTIVE WEAR PADS ARE FACING OUT ON BOTH SIDES OF THE SHELTER AS ILLUSTRATED IN "P" ABOVE.

ANCHORS:

USE THE ANCHORING SYSTEM INCLUDED TO PREVENT POTENTIAL WIND DAMAGE. IF THE INCLUDED ANCHORING SYSTEM CANNOT BE USED, WE RECOMMEND THE USE OF SAND TUBES (NOT INCLUDED) AS WEIGHTS PLACED TOWARD THE OUTER EDGES ON THE FLOOR INSIDE THE CYCLESHELTER.